

## LPWWS Smart Wi-Fi Wall Station


### Programming / Installation Instructions

This Wall Station allows operation of the light and door using the buttons, and when paired with the Linear PRO Access Android or iOS application you can operate garage doors, manage your family's access, controls lights and it informs you of people coming and going, from any location.

#### Requirements


To use with the app you will need:

- a Wi-Fi network with internet connectivity
- a strong Wi-Fi signal in the garage where you are installing the wall station
- an Android or iOS smartphone or tablet.

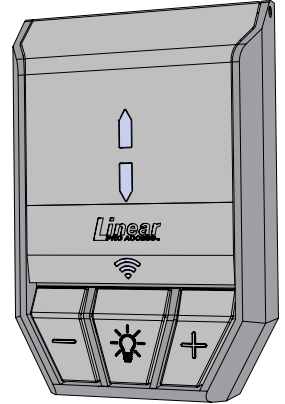

See page 5 for instructions on downloading and installing the Linear PRO Access garage door app.

#### Wi-Fi Wall Station Functions

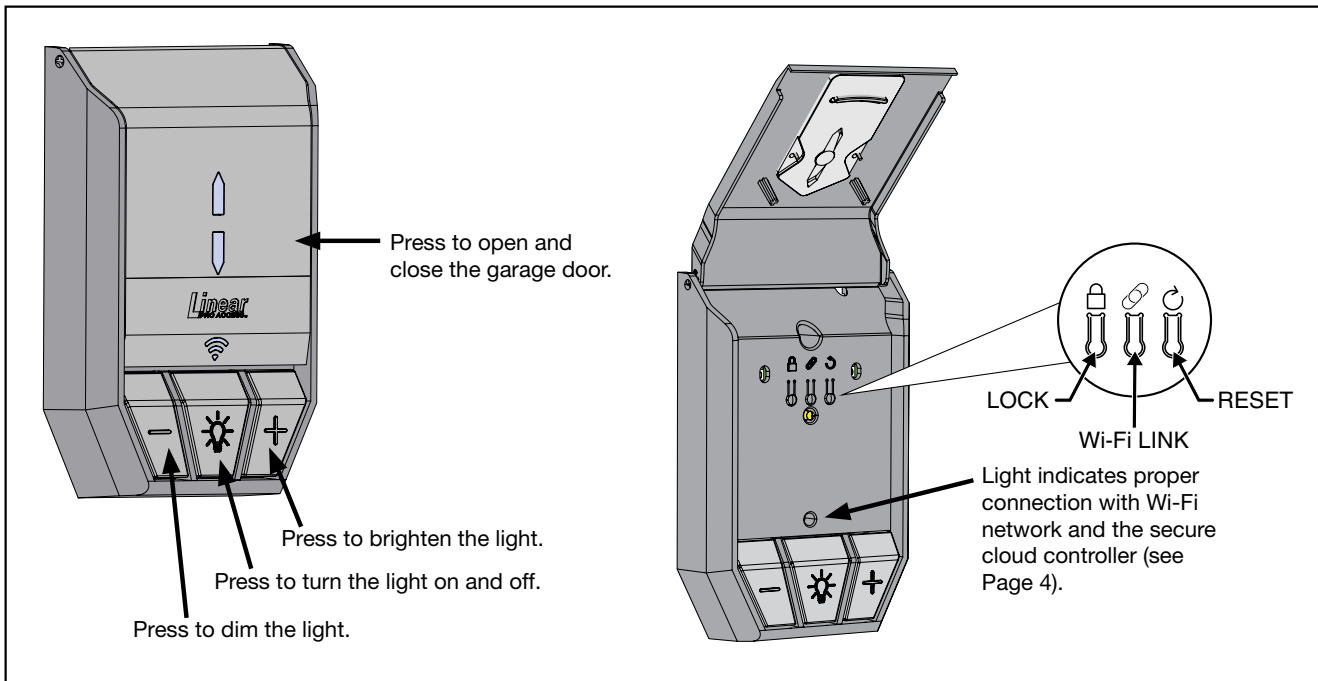

Installing the Wi-Fi Wall Station.....	page 2
Wiring the Wall Station .....	page 3
Test the Wall Station .....	page 3
Using the Wall Station .....	page 4
LED Lights on the Wall Station .....	page 5
Entrematic app Installation .....	page 5
Troubleshooting .....	page 7



# Installing the Wi-Fi Wall Station

## Test Wi-Fi Signal Strength

Before you affix the Wi-Fi wall station to the wall, survey your location to check the Wi-Fi signal. To do this, take your smart phone or tablet, connect it to your Wi-Fi network and then place your device on the wall where you want to attach the wall station.

If you have 2 or 3 bars on your device for the Wi-Fi network, the signal is strong and you can proceed. If not, use one of these options to extend your Wi-Fi network's range.

- Move your Wi-Fi router closer to the garage.
- Purchase a Wi-Fi range extender.

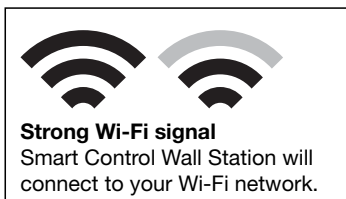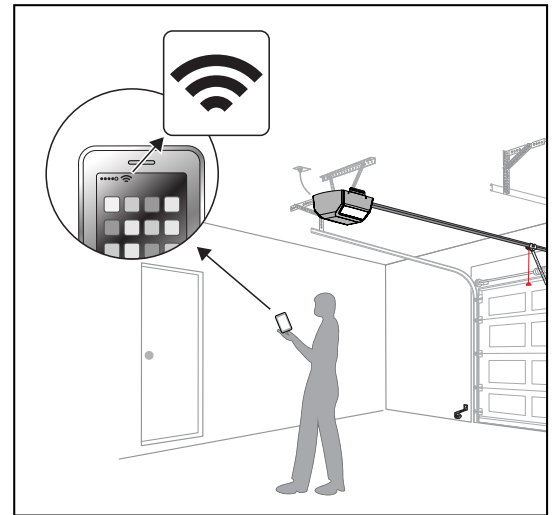


The Wi-Fi wall station must receive a strong signal from your home's Wi-Fi router to work.

## Choose Placement of Wall Station

The wall station is typically mounted inside the garage on the wall adjacent to the door into the house. Wall station can be mounted in any convenient place on a drywall-covered wall with wood studs and filled with blown-in or batt insulation.


If possible, avoid affixing the wall station:

- to solid brick or concrete walls
- to metal studs or walls with metal inside
- on top of or near AC electrical lines.

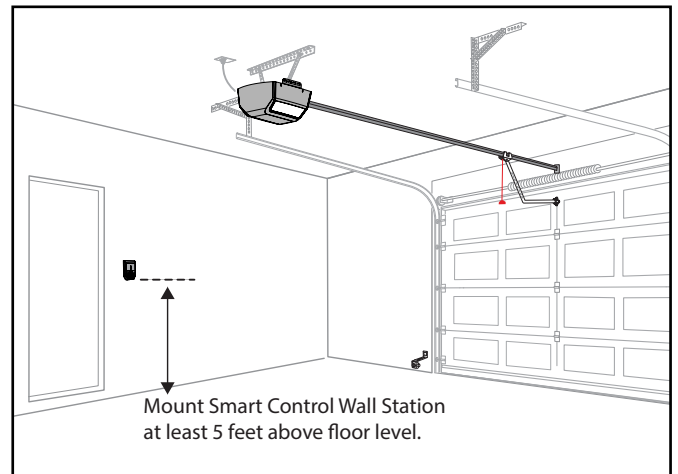

## Mount Wall Station

Follow the instructions in the diagram to the right.

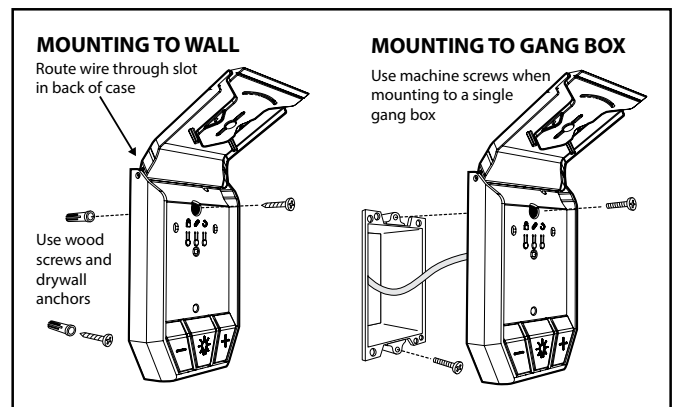

See page 5 to connect the wall station to your mobile device through the Linear Smart Control app.

## IMPORTANT

Wire polarity is critical with the Wi-Fi wall station.


### Wire the Wall Station

*Always unplug the opener head unit's AC power cord before wiring or repositioning the wall station!*

Connect the wall station to the garage door opener head unit using either the supplied or pre-existing wires.


Use the wire that has a mark to connect the COMMON (COM) terminals. Make sure that you connect the COM terminal on the wall station to the COM terminal on the garage door opener head unit.

Next, connect the WALL STATION (WS) terminal on the wall station to the WALL STATION (WALL) terminal on the garage door opener head unit.

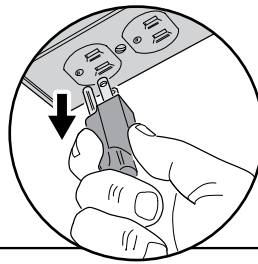

### CONNECTING WALL STATION TO OPERATOR

CONNECT WALL STATION WIRES TO WS AND COM TERMINALS (POLARITY IS CRITICAL)

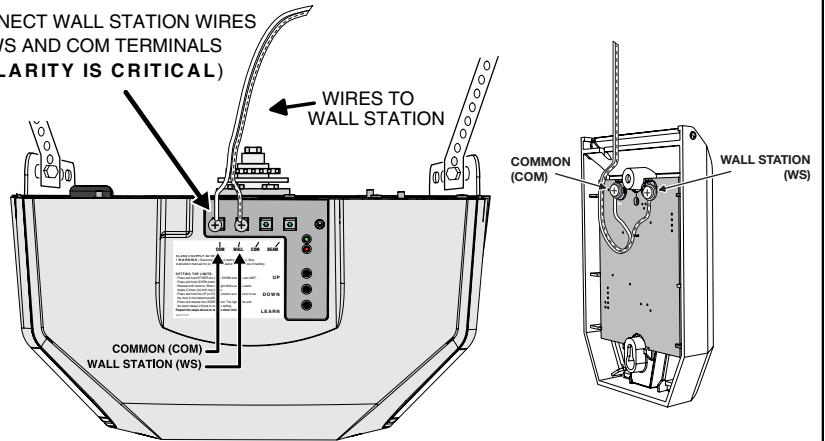


### Test the Wall Station

Once you have connected the wall station to the garage door opener head unit, test if working properly by using the wall station to operate the light and door by taking the following steps.

- Plug the garage door opener head unit's AC power cord back into an outlet.
- Wait a few moments until the LED on the wall station comes on.
- Press the light button to turn the light on and off.
- Press the cycle door button to operate the door.

If you are unable to operate the garage door using the wall station's buttons, please go to the Troubleshooting Guide on page 6.

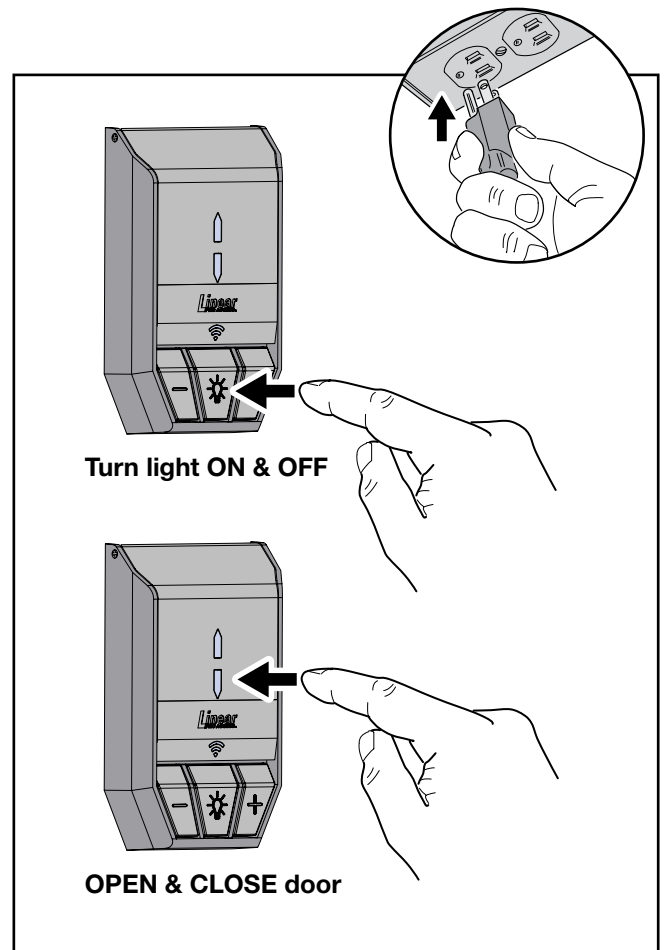

# Using the Wall Station

## Vacation Lock for Additional Security

- 1 Open the wall station's cover to access the Programming Buttons. Press the LOCK (🔒) button to prevent remote controls from opening the door after the door is completely closed. When the Vacation Lock is activated, the remote controls can close the door, but not open it. The door can still be opened or closed by using the wall station's UP/DOWN ARROW pushbutton.

**NOTE:** To signal that the vacation switch is locked, the opener's light will flash and the alarm will sound five times if a remote control is activated in an attempt to open the door.

- 2 Press the wall station's LOCK (🔒) button again to unlock and return the operator to normal operation.



## Wall Station Reset

If you change your home router or password you will need to RESET your Wall Station.

- 1 To do a Wall Station RESET press the WiFi Link (🔗) button for 10 seconds, the RED LED blinks and then turns solid RED. The Wall Station is now ready to re-link to a new or updated home router.
- 2 To re-boot the Wall Station for software updates, press the RESET (🔄) button.


## Controlling the Opener's Light

- 1 The opener's light can be turned ON by pushing the wall station's on/off (💡) button. The light will stay on until the button is pressed again or the opener is cycled.
- 2 To DECREASE the light brightness press the dimmer (—) button.
- 3 To INCREASE the light brightness press the brighter (+) button.

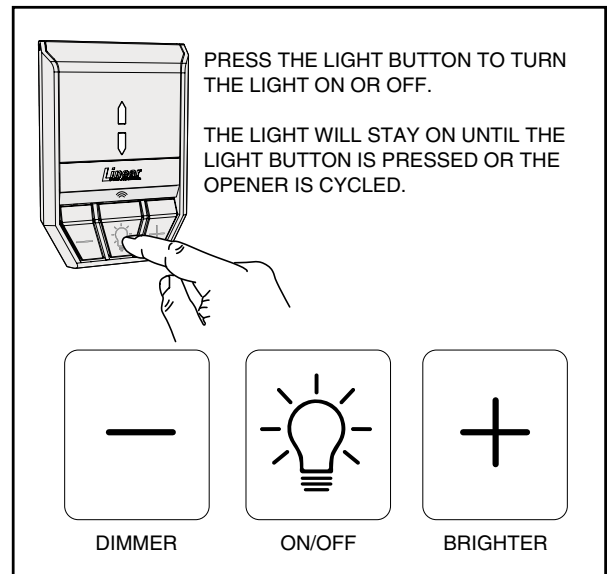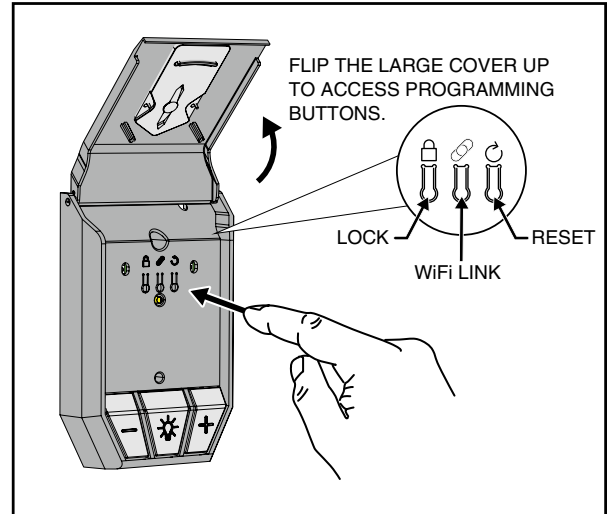

## LED Lights on the Wall Station

The Wi-Fi wall station has two LED lights that convey information at a glance.

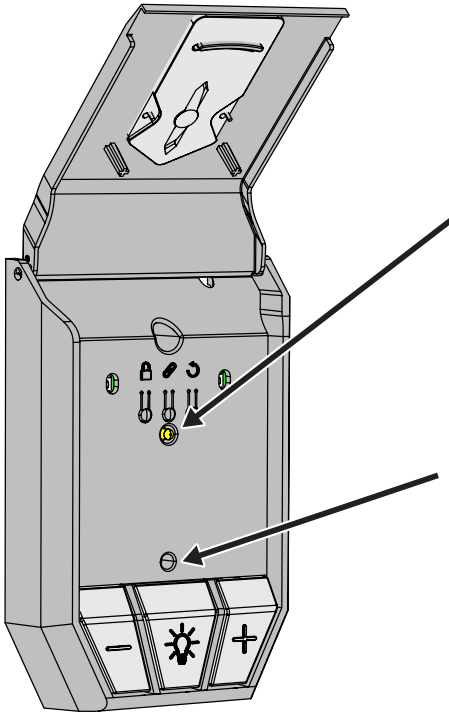

The top LED light provides information on the vacation mode.

Vacation Mode LED	
ON	Normal operation. Vacation mode disabled.
FLASHING	Vacation mode enabled.

The bottom LED light indicates the state of the Wi-Fi connection and wall station.

Wi-Fi Connectivity LED	
RED	Not connected to Wi-Fi.
YELLOW	Performing update
GREEN	Connected to Wi-Fi.

## LPA app Installation

### Download, Register and Activate Application

Use your smart phone or tablet to visit your app store to download and install the LPA application. On initial use you'll be asked to register and create an account. Once complete, sign in with your new account information.

### Connect the Opener to app

Stand near Wi-Fi wall station. On your mobile device, in the LPA app, tap the plus sign at the bottom right of screen to Connect Your Device. Follow directions in app to Connect Your Device.




## Use the LPA app

The app's main screen indicates the current state of the garage door and allows operation. If your garage door is fully closed, the app will show the door fully closed. If the garage door is partially or fully open, the app will show the door open.

To close or open the garage door, tap the garage door icon. Likewise, tap the light icon to turn the garage door light on or off.

For a detailed view of the device, tap a device icon. From here you can adjust the brightness of the light, and you can view a history of who operated the device.

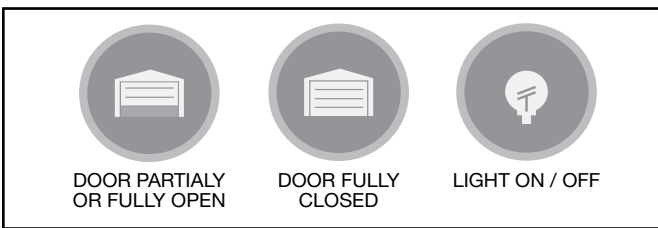

## Manage Your Devices and Members



Tap the Site Menu icon (three circles stacked on top of each other) located in the top left of the screen. From here you can remove devices from your site, invite new members to join your site and remove existing members from your site.

### Invite Others

To invite a new member, select the Invite New Member button at the bottom of the Site Menu.

You will be asked to set their permission level. There are three classes of members in this application:

- You, the Entrematic app administrator, who created the site and added devices.
- Administrators, who can invite others, set/change permissions, and operate and view all devices.
- Regular members, who can operate and view only specified devices.

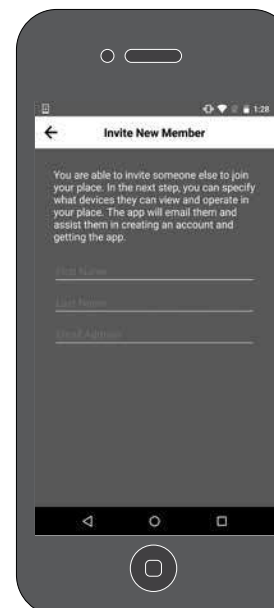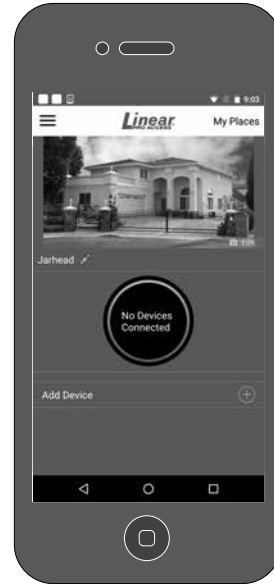

TROUBLESHOOTING GUIDE		
Condition/LED Color	Possible Cause	Possible Solution
Wall station does not power on.	1. Incorrect wiring	1. Check wall station wiring for correct polarity. 2. Confirm head unit is plugged in and has power. 3. Call tech support.
RED	1. Wall station has not been assigned to an access point. 2. Wall station is not within range of its assigned access point. 3. Antenna interference.	1. Use the mobile app to configure the wall station's access point. 2. Relocate the wall station or relocate the homes access point. 3. Ensure area around the wall station is free from metal objects and electrical wires. Reference page 2 of this manual for checking Wi-Fi signal.
YELLOW	1. Checking for updates	1. No action required from user; this behavior is normal and temporary.

**WARNING:** Changes, modifications or adjustments not expressly approved by GTO Access Systems, LLC could void the user's authority to operate this equipment. There Are No User Serviceable Parts.

**NOTICE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 the FCC. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTICE:** This device complies with part 15 of the FCC. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

